



Figure 2-2

2.3.1.2 Attention

- At in the shipping crate the machine is bolted to the base,it is best to move the machine with a forklift.
- Do not lift the machine via the spindle head, this can cause permanent damage to the machine
- Keep level and avoid bumps this may cause the machine to tilt unexpectedly.